

LUNA SERIES DOWNLIGHT INSTALLATION INSTRUCTIONS

LUNA 3QCO




LUNA ROUND SERIES



WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.
RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.



CUTOUT TABLE

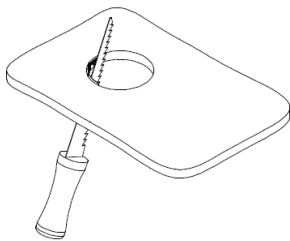

NOTE: ROUND FRAME INSTALLATION SHOWN, FOLLOW SAME PROCEDURE FOR SQUARE FRAME.

FIXTURE	CUTOUT
LUNA 1 SERIE	56mm/2.2"
LUNA 2 SERIES	81mm / 3.19"
LUNA 3 SERIES	95mm/ 3.74"
LUNA 3 O	104mm / 4.09"
LUNA 3 Q	95x95mm/ 3.74x3.74"
LUNA 4W	136mm / 5.35"
LUNA 4 O	136mm/5.35"
LUNA 6 SERIES	166mm / 6.53"
LUNA 8 SERIES	205mm / 8.07"
LUNA 3 QCO	120 x130 mm/4.72x5.12"

FIXTURE INSTALLATION

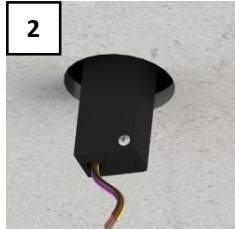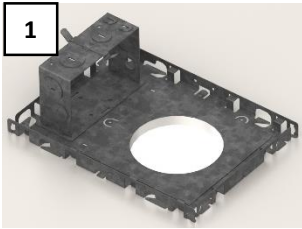

1. IF USING AN ENCLOSURE, INSTALL IT USING HANGER BARS. MAKE ELECTRICAL CONNECTIONS FROM THE POWER SUPPLY TO THE POWER LINES, BLACK TO BLACK, WHITE TO WHITE AND GREEN TO GREEN WIRES. CUT HOLE IN THE CEILING DRYWALL USING THE HOLE IN THE ENCLOSURE AS A GUIDE. CUTOUT DIMENSIONS ARE ALSO AVAILABLE IN THE CUTOUT TABLE OF THESE INSTRUCTIONS. (FIGURE 1)
2. IF NOT USING AN ENCLOSURE, CUT A HOLE PER THE CEILING CUTOUT TABLE. PLACE THE POWER UNIT IN THE CEILING. REFER TO THE DRIVER RETROFIT KIT INSTALLATION INSTRUCTIONS FOR INFORMATION ON HOW TO INSTALL. (FIGURE 2)
3. FOR LUNA SERIES 6 AND 8 DOWNLIGHTS, ATTACH THE PROVIDED TETHER TO A SECURE STRUCTURE ON THE CEILING USING THE APPROPRIATE HARDWARE. CONNECT THE OUTPUT OF THE POWER UNIT TO THE FIXTURE. RED TO RED WIRE, BLACK TO BLACK WIRE USING THE PROVIDED WAGO CONNECTORS. (FIGURE 3)
4. OPEN SPRINGS AND INSERT THE FIXTURE INTO THE TRIM OPENING WITH THE HEATSINK FIRST. MAKE SURE THE WIRES ARE ALL THE WAY IN. (FIGURE 4)
5. TURN POWER ON. (FIGURE 5)