



LARA 3S DOWNLIGHT INSTALLATION INSTRUCTIONS

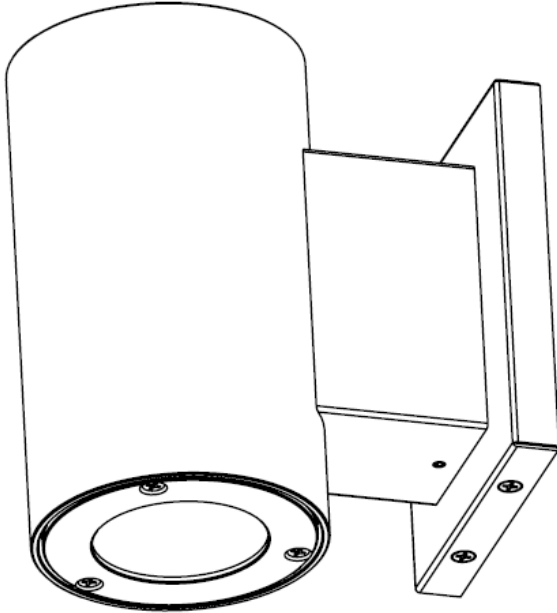

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. CONNECTION OF LUMINAIRE TO POWERED DRIVER WILL RESULT IN PERMANENT DAMAGE TO THE LED AND VOIDED PRODUCT WARRANTY. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

MATERIALS USED FOR CEILING FIXATION SHOULD CONFORM TO THE RELEVANT BUILDING REGULATIONS.

FIXTURE INSTALLATION

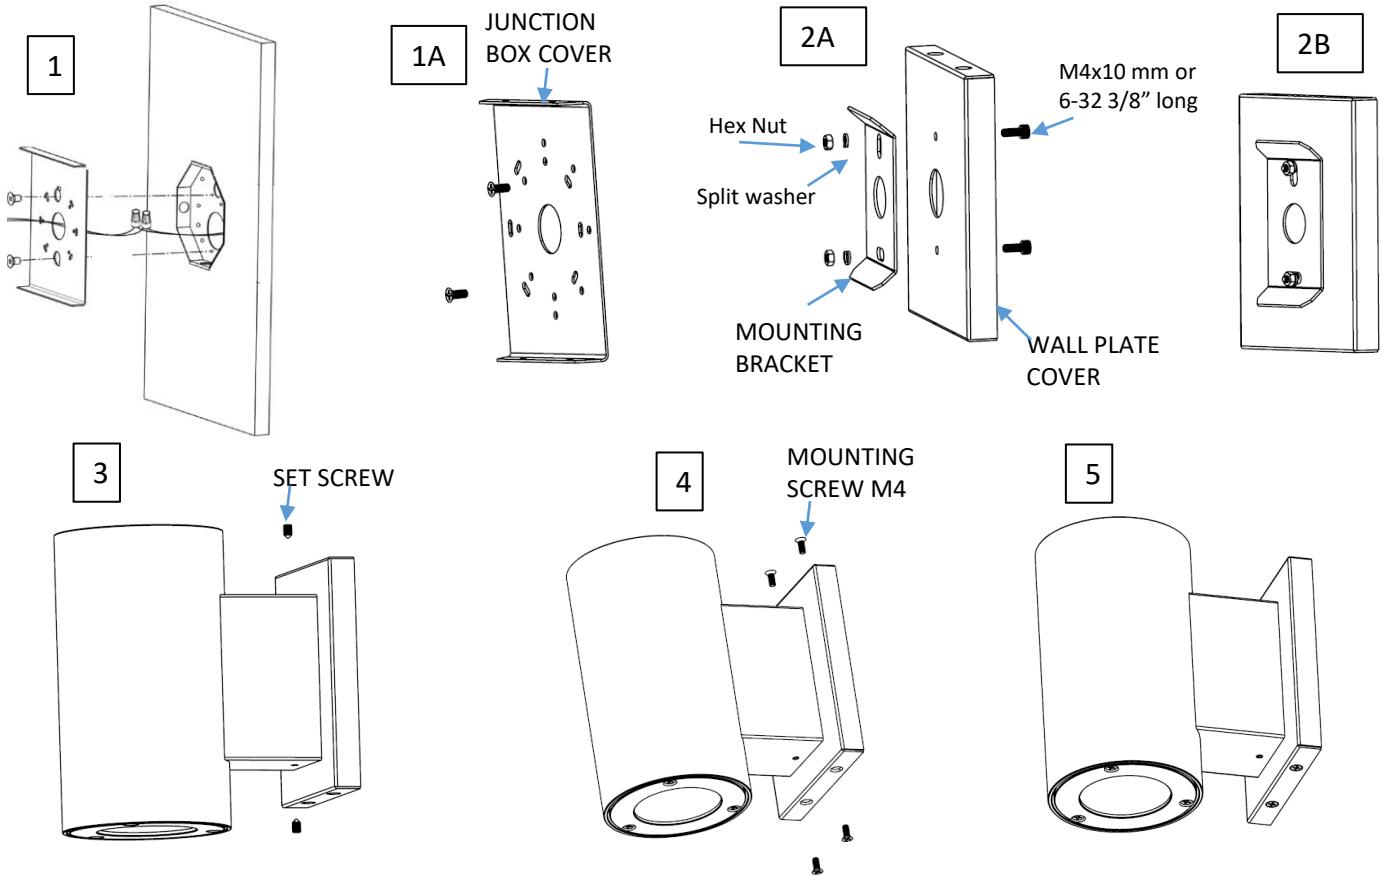

1. THE DRIVER FOR THE FIXTURE MUST HAVE BEEN INSTALLED REMOTELY PRIOR TO INSTALLING THE FIXTURE. RUN THE BLACK AND RED WIRES FROM THE REMOTE DRIVER THROUGH THE CENTRAL HOLE. USING THE PROVIDED WAGO CONNECTORS, CONNECT THE RED AND BLACK WIRES FROM THE REMOTE DRIVER TO THE RED AND BLACK WIRES FROM THE FIXTURE RESPECTIVELY. PLACE FIRST THE JUNCTION BOX COVER AND SECURE TO THE J-BOX USING APPROPRIATE HARDWARE (PROVIDED BY OTHERS) SEE FIGURE 1 AND 1A.
2. PUT TOGETHER WALL PLATE COVER WITH THE MOUNTING BRACKET USING THE APPROPRIATE HARDWARE SUPPLIED BY OTHERS, THE HOLES ON THE PLATE ARE MADE FOR M4 OR 6-32 SCREWS (FIGURE 2 AND 2A).
3. PLACE THE FIXTURE ON THE MOUNTING BRACKET AND SECURE USING THE PROVIDED 2X SET SCREWS (FIGURE 3).
4. INSTALL THE FIXTURE ON THE JUNCTION BOX COVER WITH 4x PROVIDED SCREWS M4 (FIG.4)
5. TURN POWER TO THE FIXTURE BACK ON.